


FG8702G0x README Firmware Update v01.06


Update procedure

Follow the following steps to perform an update via huma®:


1. Click System on the upper left corner
2. Click Firmware Update in the left panel
3. Drag and drop the FG8702G0x_update_v0106 file into the drag and drop field

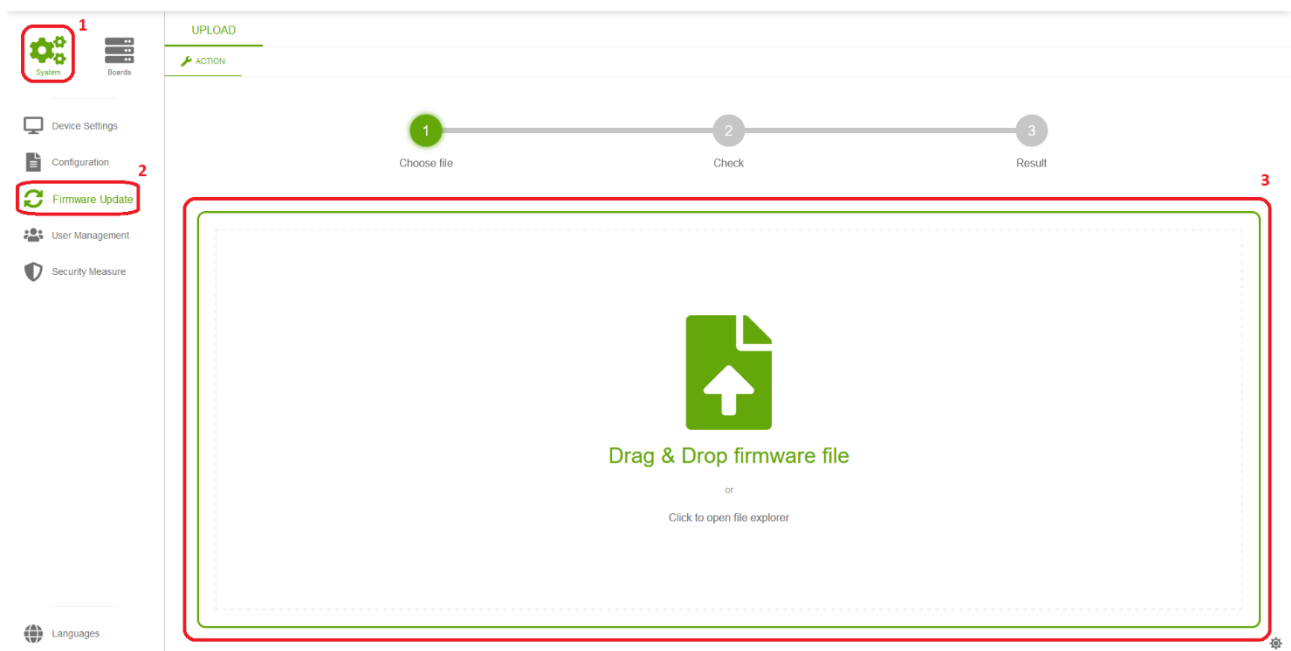


4. After approximately 2 minutes the firmware update check page will be displayed

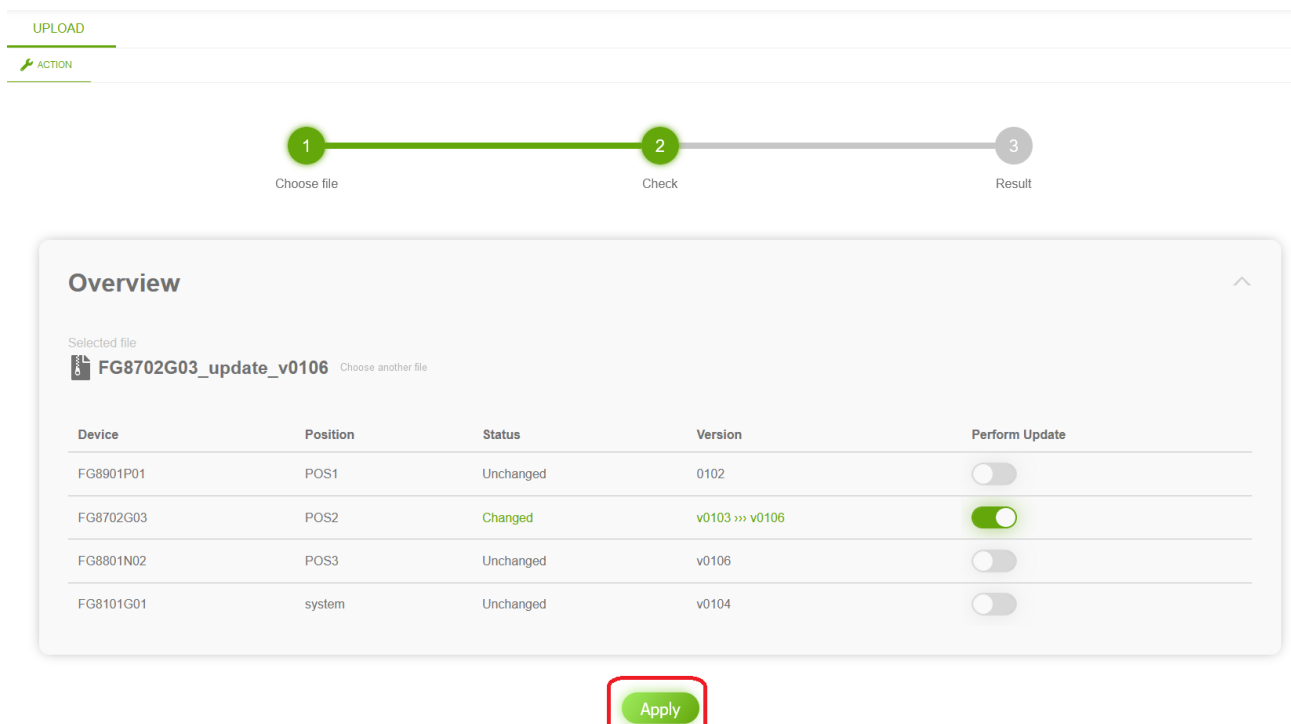

5. All boards that can be updated with this firmware update are highlighted in green and the new firmware version is displayed. Click the Apply button to perform the update
6. The firmware update progress page is displayed

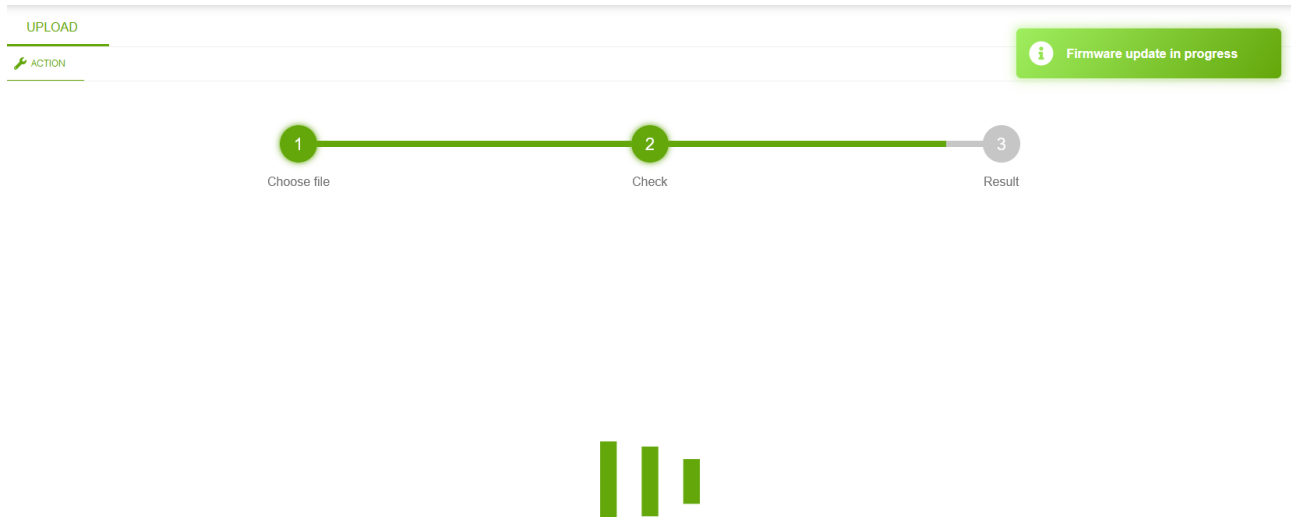

7. After approximately 5 minutes the firmware update is finished and the reboot screen is displayed
8. The following steps are only needed if the update board was not the management board in POS2
9. Login
10. Click on the board in POS2

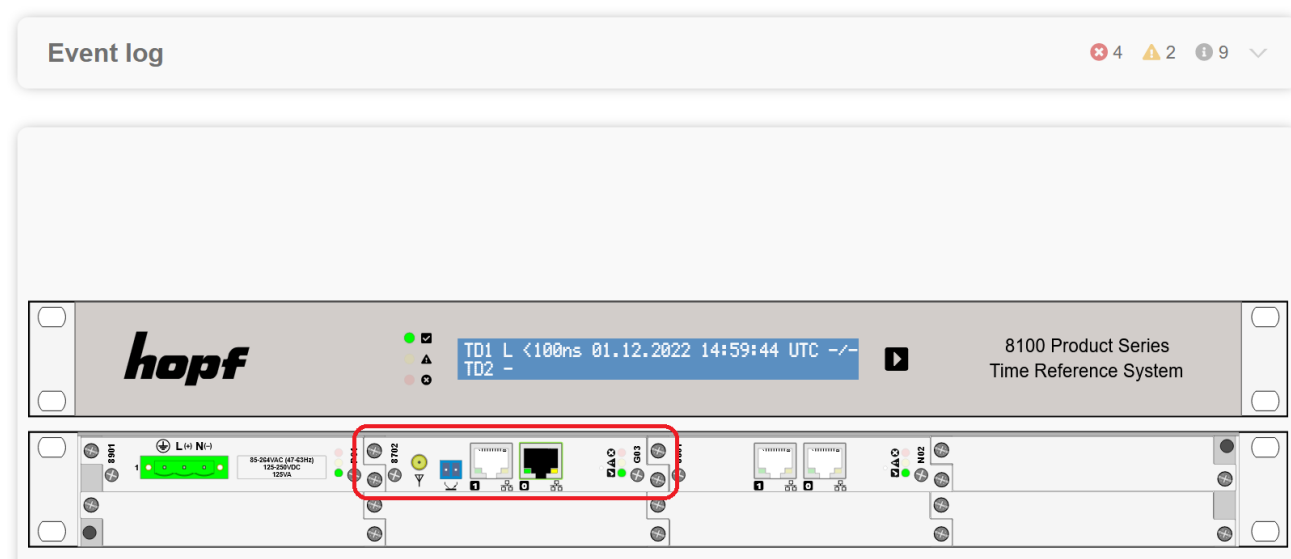

11. Click ACTION

The screenshot shows the Hopf management interface. On the left, there is a sidebar with a 'Boards' section containing two boards: FG8901P01 and FG8702G03. The 'ACTION' button is highlighted in the top navigation bar. The main content area shows a detailed view of the FG8702G03 board, including its status (Ok), serial number (000002), position (POS2), and version (v0106). A 'Download diagnosis file' button is visible at the bottom of the board details.

12. Click the Reboot button to trigger a reboot of the management board

Timeout issue


The firmware update from Set0103 to Set0106 takes several minutes. When a FG8702G0x board is used as management controller with firmware version v01.06 or smaller, the corresponding timeout in huma® can be too short and then it will display the following sequence:

1. huma® displays that the update is active


The screenshot shows the 'UPLOAD' section of the Hopf management interface. A progress bar is displayed with three steps: 1. Choose file, 2. Check, and 3. Result. The progress bar is currently at step 2. A green button labeled 'Firmware update in progress' is visible in the top right corner.




- huma® displays that the update has timed out, but a green message in the upper right corner indicates that the update is still in progress

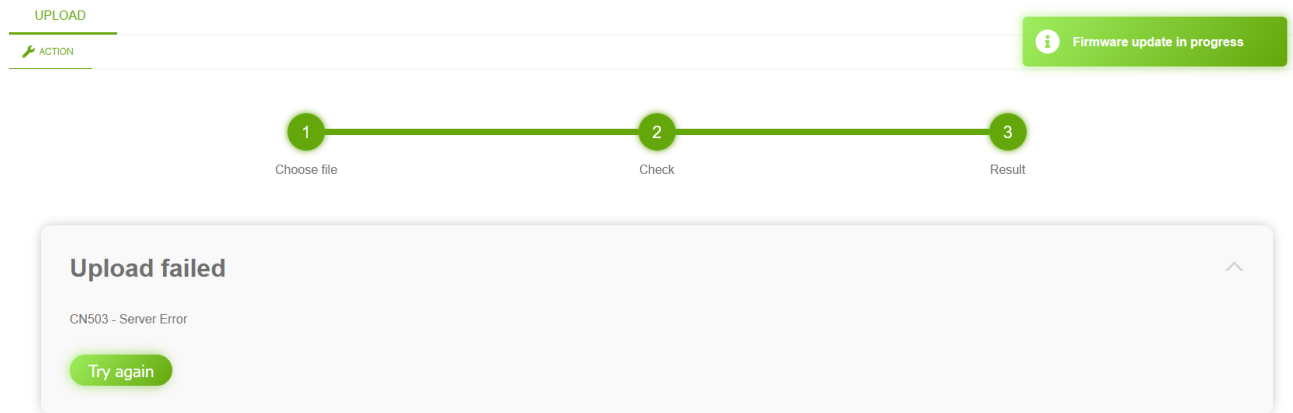

- The green message in the upper right corner disappears, indicating, that the update has finished and the updated board will reboot in a few seconds

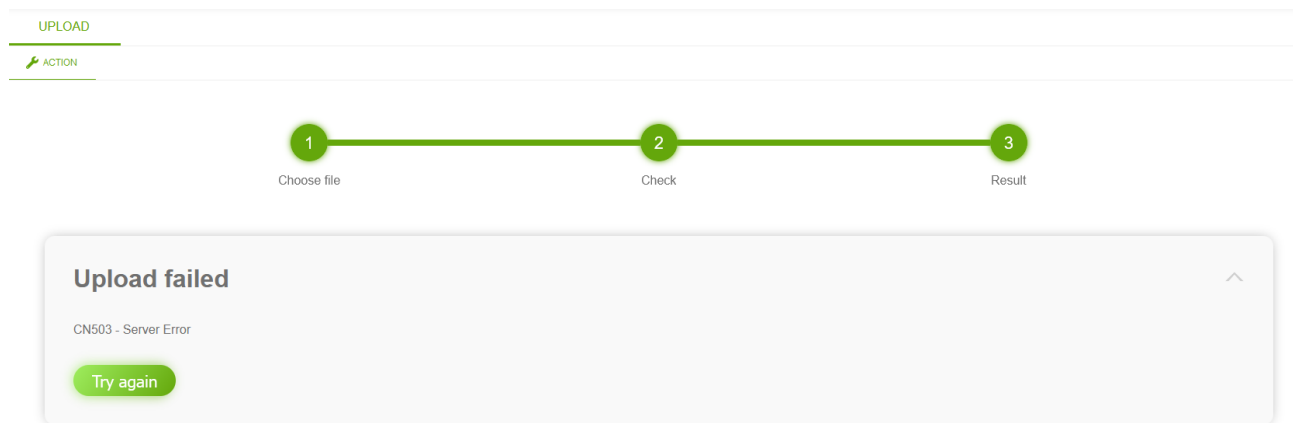

- The orange message box in the bottom right corner indicates, that the updated board is rebooting

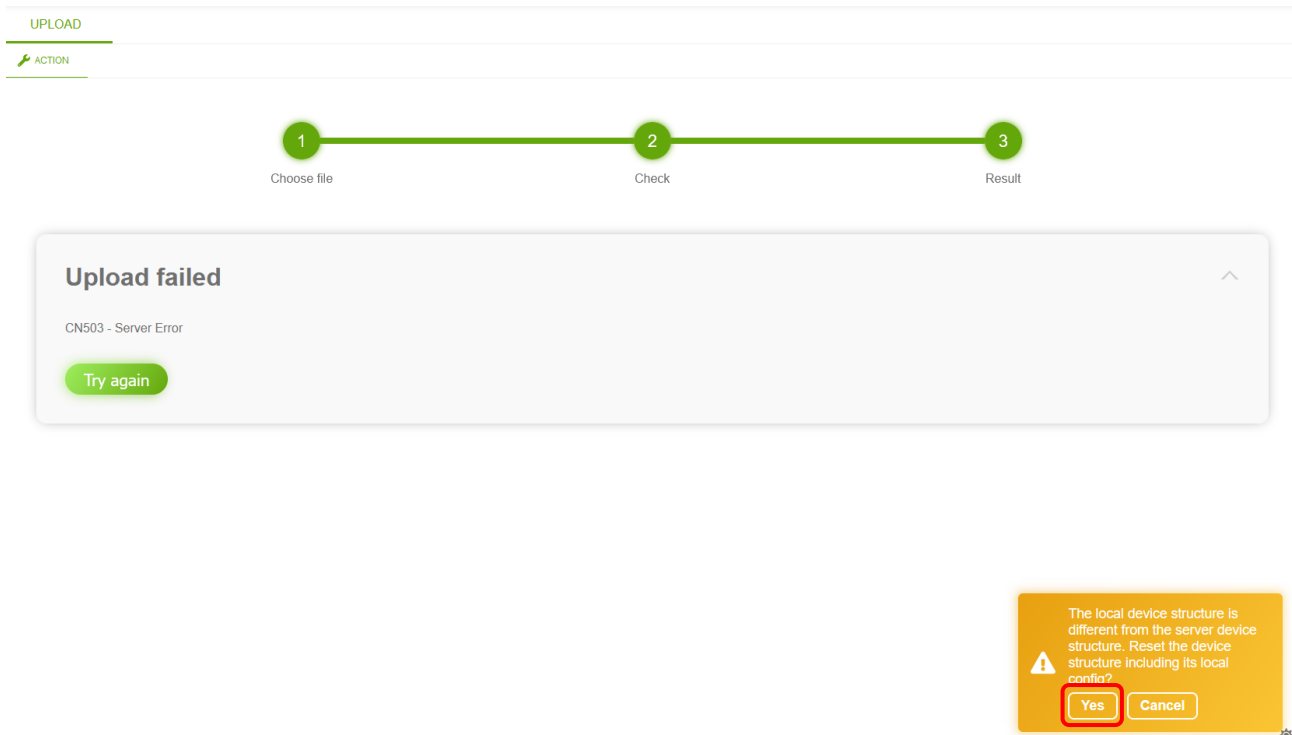

- Click the Yes Button in the message box
- Follow steps 8 to 11 of the update procedure to perform a reboot of the management board